



HOMEGEAR

Rotary Washing Line

Assembly Instructions



Simply insert the ground mount/socket into place.



Insert supporting/base pole into the ground mount/socket.



Insert the main unit into the support/base pole, then using the lift mechanism raise and open the arms.

General Information and Safety Warnings

- Do not let children or pets swing on the rotary line or items of laundry.
- Do not use the rotary line for any other purpose other than to hang and dry washing.
- Regularly check your line for any worn or damaged parts. If there is any damage, do not use until the rotary line is repaired
- When not in use close your dryer and use the protective cover provided.
- Do not use during storms
- Hang your laundry evenly. We recommend putting smaller items at the back of the line, and work outwards for larger items
- Make sure the rotary line is located where it can rotate freely
- The rotary line can be wiped clean with a damp cloth and mild detergent. Do not use harsh or abrasive cleaning products

For extra stability the ground socket can be cemented into the ground